

VOLKSWAGEN

VW Transporter, Combi, Multivan T5 (7HZ model - 6.03 >>) - Shock absorber identification



FI140EU


Shock absorber identification



To determine the shock absorber of a Volkswagen Transporter V, there are two solutions:

1 - By measuring the ride height :


H1 and H2 : Height of the center of the wheel on the lower flange of the wheel.

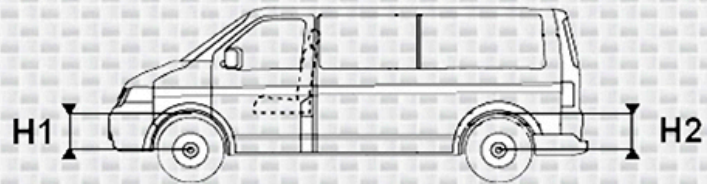

	Standard suspension (ND)	Heavy duty suspension (HD)	Sport suspension (SP)
H1 : Front ride height (en mm)	455 (+/- 10)	471 (+/- 10)	437 (+/- 10)
H2 : Rear ride height (en mm)	459 (+/- 15)	479 (+/- 15)	439 (+/- 10)

2 - with the optional code, present on the identification label (on the first page of the service book or under the dashboard, driver's side)

WV2ZZZ 7H z 4H000000											
7HM			C01								
MULTIVAN						Comf. KR					
96 KW			TDISG6								
AXD											
LA7W			0000 0000			EJ					
Option											
X10	B0A	CK2	G0K	H0E	J1U	MM3					
-	1AJ	1G2	2PW	1NL	5RQ	5SL	T65				
	3S4	3JA	QG1	-	SU1	8GV	8L6				
					1BA	0GE					
0E1	-	4UF	4X3	4R1	4C7	N0H	5MA				
8RM	2JG	E0A	2V1		0JD	0YA					
1D0	A8E	8EL	U5A	1N1	3L3	7A3	8N1				

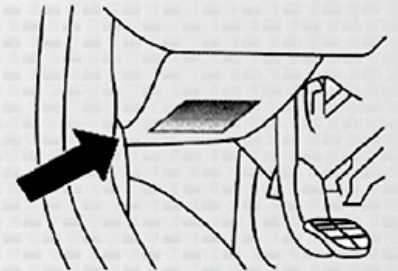

	Standard suspension (ND)	Heavy duty suspension (HD)	Sport suspension (SP)
Multivan (K4H)	1BA / 2MF / A8B / A9K	1BB / 1BJ / 2MG / 2MK / 2ML	1BV / 2MD
Camping car (K4L)	1BA / 2MF / A8B / A9K	1BB / 1BJ / 2MG / 2MK / 2ML	
Fourgon, Minibus (K4A / K4B)	1BA / 2MF / A8B / A9K	1BB / 1BJ / 2MG / 2MK / 2ML	1BV / 2MD

VOLKSWAGEN

		ORIGINAL			ORIGINAL	
TRANSPORTER, MULTIVAN						
T 5 (+/-) 4MOTION (-) ND, (-) V, (+) SP	03--	V4505	MK271		V1169	
T 5 (+/-) 4MOTION (-) HD	03--	V4505	MK271		V1170	

Except total weight over 3.0, 3.2 tonnes

You will find all shocks in our online catalog :
www.monroecatalogue.eu