

Identification of front shocks

Volkswagen Crafter



FI139EU

Identification of front shocks (except 4X4)

In order to determine the front shocks of a Volkswagen Crafter, there are two solutions :


1 - By measuring the height of the shocks:

length X (mm)	Monroe® reference
250	V4510
270	V4511



2 - Thanks to the TPLW (Total Permissible Laden Weight) specified on the nameplate or in the grey card (F2).

total vehicle weight	Monroe® reference
3 000 kg	V4510
3 500 kg	
5 000 kg	V4511

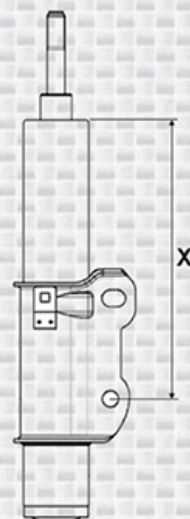

VOLKSWAGEN COMMERCIALS

MONROE		ORIGINAL ADVENTURE	MONROE	ORIGINAL ADVENTURE	MONROE	ORIGINAL ADVENTURE
CRAFTER						
3 T, 3.5 T (=) (4 x 2)	6.06 →	V4510	MK287 MC114	1/5	V1177	
5 T (=) (4 x 2)	6.06 →	V4511	MK287 MC114	1/5	V1178	CHD CHD

You will find all shocks in our online catalog :
www.monroecatalogue.eu