

Identification of front shocks

Mercedes Sprinter (model WDB906 – 6.06 >>)



FI135EU

Identification of front shocks (except 4X4)

In order to determine the front shock of a Mercedes Sprinter, there are two solutions :


1 - By measuring the height of the shocks:

length X (mm)	Monroe®
250	V4510
270	V4511




2 - Thanks to the TPLW (Total Permissible Landen Weight) specified on the nameplate or in the grey card (F2).

total vehicle weight	Monroe® reference
3 000 kg	V4510
3 500 kg	
5 000 kg	V4511

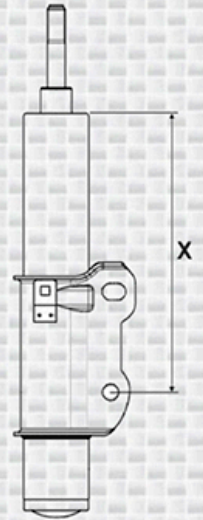

MERCEDES BENZ COMMERCIALS



SPRINTER

3 T, 3.5 T (=) (4 x 2)	6.06 →	V4510	MK287 MC114	$\frac{1}{3}$	V1177		C10
5 T (=) (4 x 2)	6.06 →	V4511	MK287 MC114	$\frac{1}{3}$	V1178		C10

You will find all shocks in our online catalog :
www.monroecatalogue.eu