





FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 ISTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

VW Beetle 01.98 →  
 VW Bora 10.98 →  
 VW Golf IV 06.97 →





**micronAir® blue**

BL592  
 CB1028

**VW Beetle**

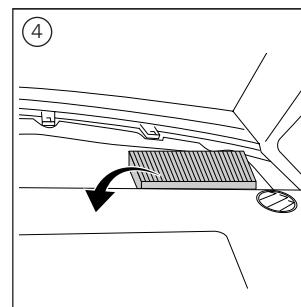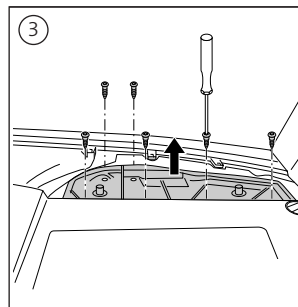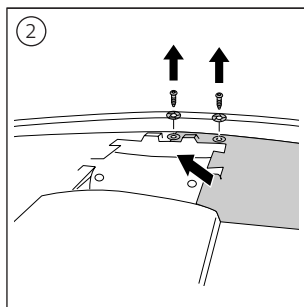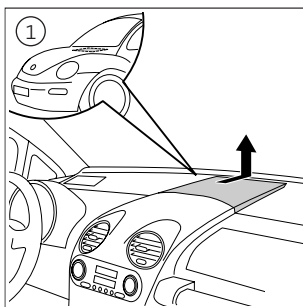

**VW Bora/VW Golf IV**

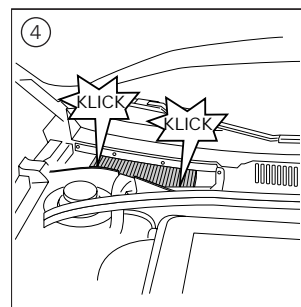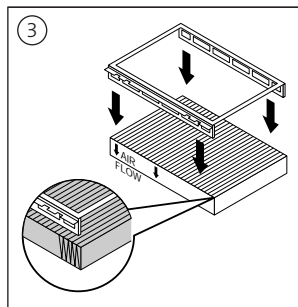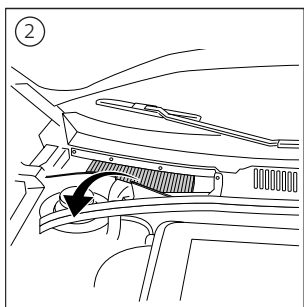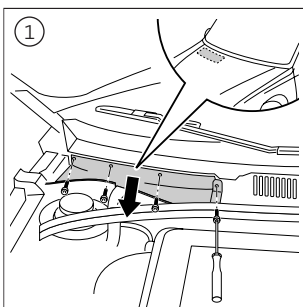

④

10.000 KM  
 6.200 M

½ yearly\*

\*according to VDI 6032

03-CA-532-December-2017-ML