

## Assembly instructions for hydraulic filter kit

Einbauhinweis für Hydraulikfiltersatz

Instrucciones de montaje para kit filtro hidráulico

Instructions de montage pour jeu de filtre hydraulique

Инструкция по установке комплекта гидравлического  
фильтра

Istruzioni di montaggio del kit del filtro idraulico



**MEYLE no. 100 137 1003 | 100 137 1004**

**Short no. MHK0046 | MHK0047**

To fit/Passend für/Aptos para/Convient pour/для/Adatti per

Audi



**Installation by qualified personnel only.  
Car manufacturer's instructions to be  
observed closely.**

Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.

El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.


Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.

Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.

Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.

## Version 1

MEYLE no. 100 137 1003

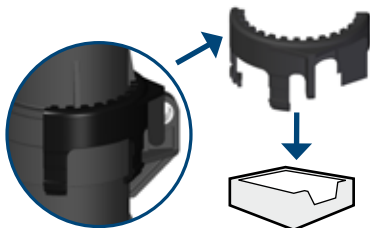

## Version 2

MEYLE no. 100 137 1004

