

SWAG 20 79 0044

To Fit:
BMW 3 Series E36 and E46, X3 E83




EN

Control Arm Bush



Attention!

Before installing the new rubber mount, mark the trailing arm eye on the outside with a coloured mark according to the diagram. Clean the rubber mount and trailing arm eye, making sure the mating surfaces are free from oil and grease.

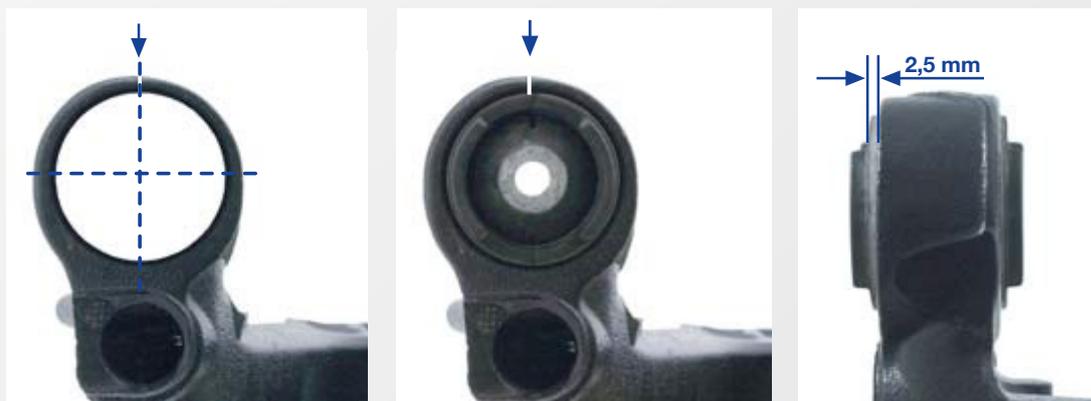

The slot in the new rubber mount must be aligned with the marking on the trailing arm, then installed with a suitable special tool until the mounting is pressed in, up to the dimension of 2.5 mm.

For more technical information please visit: partsfinder.bilsteingroup.com