

SWAG 20 92 7086

to fit:
BMW 3 series (E46), Z4 (E85, E86) models

SWAG®



EN

Steering boot set with clamps

This steering boot repair kit comes complete with clips and two spacer rings. The spacer is located on the steering tie rod, which determines the thickness of the spacer to be used. One spacer has a thickness of 14.5 mm for models from 09/98 onwards. The other spacer has a thickness of 17 mm and fits models pre 09/98. (Fig.1)

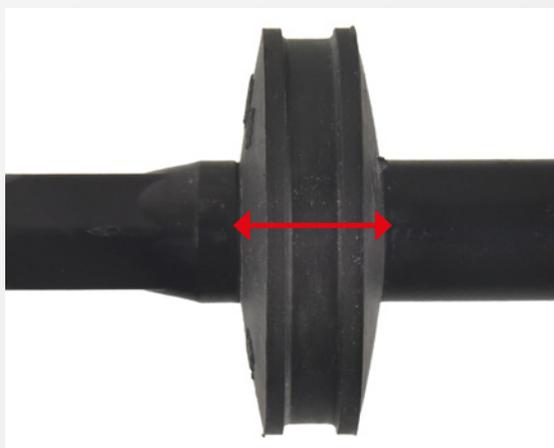


Figure 1

For more technical information please visit: partsfinder.bilsteingroup.com