


Suspension strut JGM240T


The correct position of the rubber plate, the spring and the shock absorber on the knuckle, is of great importance while installing the suspension strut to the vehicle. Please observe the following installation advices:

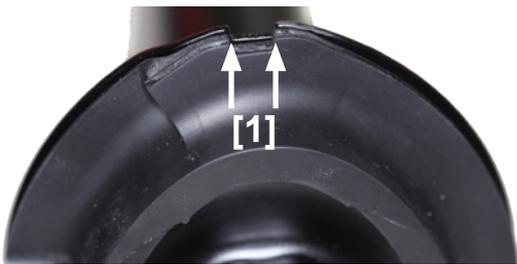

Align the grooves of the McPherson strut and the rubber plate [1]




Place the spring [2]

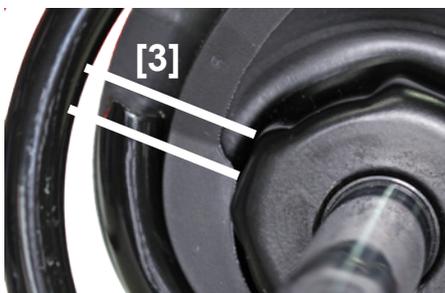

Correct spring position: the rubber bend and the end of the spring are in line [3].
Follow the vehicle manufacturers advices during the assembly of the shock.



Left knuckle: align the shock absorber with the arrow "L" into the centre of the groove [4].

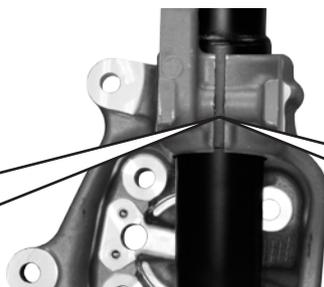

Right knuckle: align the shock absorber with the arrow "R" into the centre of the groove [5].

