

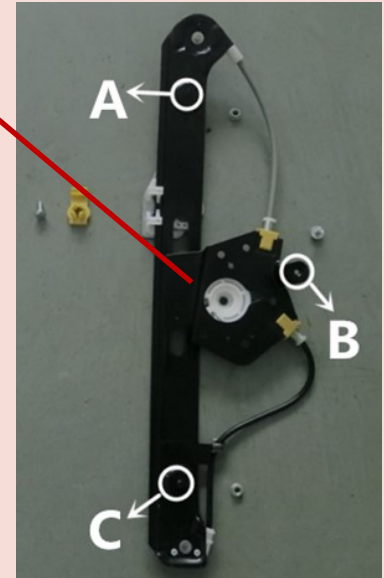


Einbauhinweis/installation instruction BMW 3 Series E46 1999-2005

Hinten links/Rear left (OE Ref. No.: 51 35 8 200 717)

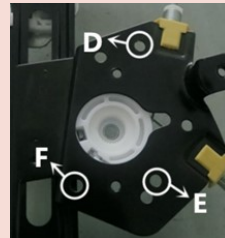

Hinten rechts/Rear right (OE Ref. No.: 51 35 8 200 718)

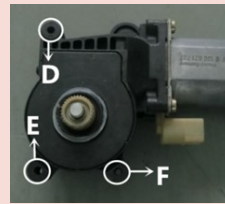