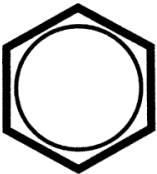


Anziehvorschrift für Zylinderkopf		075.530 passend für / suitable for adaptable à / adaptable a LOTUS	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

8

6

1

3

9

10

4

2

5

7

Anziehen/
 Tightening/
 Serrage/
 Apriete

stud bolt / nut M12
 * 20 Nm (15 lbs.ft)
 ➤ 75°
 ➤ 40°
 ● 5 Minutes
 ➤ 20°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 ⚙ 1,7mm Ø 97,4mm
 Mot.: 2,0l 4-Cyl / 3,5l V8 900-Series
 Esprit, Excel

ElringKlinger AG, Max-Eyth-Str.2
 72581 Dettingen / Erms. Tel. 07123/724 601

075.530