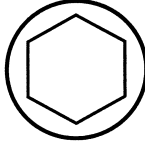
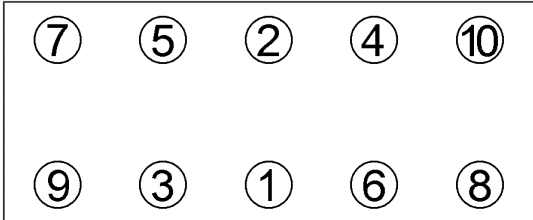


Anziehvorschrift für Zylinderkopf		560.066 passend für / suitable for adaptable à / adaptable a Mitsubishi	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 709.190 M 12 x 104				
Anziehen/ Tightening/ Serrage/ Apriete		* 30-40 Nm 70-80 Nm 115-125 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
82,5 mm Ø				
Colt, Lancer 1,8 Ltr. Diesel ab 1983>				
Mot.4 D65, 43/44 kW (58/60 PS)				
Galant E14A, Space-Wagon 1,8 Ltr. Turbo-Diesel				
Van D09, 1,8 Ltr. Turbo-Diesel ab 1984>				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*560.066*	