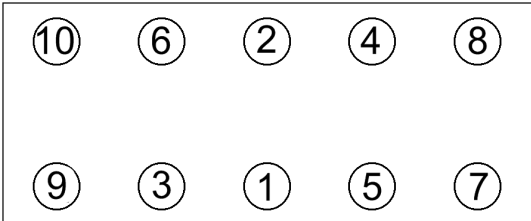


Anziehvorschrift für Zylinderkopf		789.180			Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for			
Instructions de serrage pour culasse		adaptable à / adaptable a			
Prescripciones de apriete para culatas		Fiat, Lancia, Alfa Romeo			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
524.160 M 12x1,25x198					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 63 Nm 90° 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 80,5 mm ⚖: 0,82 mm					
Mot: 1,6 ltr. JTD 66-88 kW (90-120 PS)					
Nuovo Bravo, Linea, Grande Punto, Idea, Punto Evo, Nuovo Doblo, Mito, Giulietta, Musa, Nuovo Delta					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*789.180*		