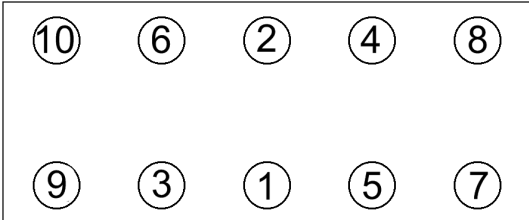


Anziehvorschrift für Zylinderkopf		789.200	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Fiat, Lancia, Alfa Romeo	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
524.160 M 12x1,25x198			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 63 Nm 90° 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 80,5 mm 1/2: 1,02 mm			
Mot: 1,6 ltr. JTD 66-88 kW (90-120 PS)			
Nuovo Bravo, Linea, Grande Punto, Idea, Punto Evo, Nuovo Doblo, Mito, Giulietta, Musa, Nuovo Delta			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*789.200*	