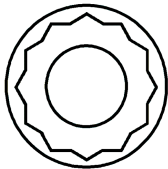


Anziehvorschrift für Zylinderkopf	800.710 passend für / suitable for adaptable à / adaptable a Toyota / Lexus	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

7	2	4	6
5	3	1	8
8	1	3	5
6	4	2	7

Anziehen/ Tightening/ Serrage/ Apriete

*	25 Nm
➤	54 Nm
	90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Ø: 88,9 mm / ⚙: 1,3 mm
 assembly position: right side
 3.0 Ltr. V6 24V / 3.5 Ltr. V6 24V
 Mot.: 1MZ-FE / 2MZ-FE

 Avalon, Camry, Sienna, Solara, Windom
 Lexus ES300

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*800.710*
--	------------------