
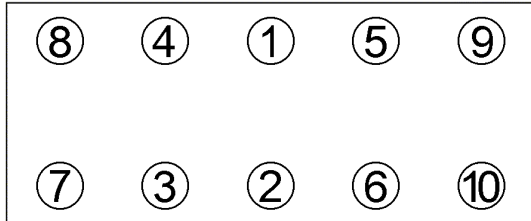


Anziehvorschrift für Zylinderkopf	984.215	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Renault

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



759.180
M 12 x 113



- | | | |
|-------------|---|-----------------------------------|
| Anziehen/ | * | 30 Nm |
| Tightening/ | ➤ | 80°±4° |
| Serrage/ | ● | 3 min |
| Apriete | □ | lösen/loosen
desserrer/aflojar |
| | ➤ | 25 Nm + 213°±7° |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

79 mm Ø, 1,86 mm ÷

Mot. F8M 700/720/730, 1595 ccm, 40 kW (55 PS)

R 5 Diesel

R 9 Diesel

R 11 Diesel

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

984.215