





## Replacement of flywheel-side oil seal

# MAN D20 | D26

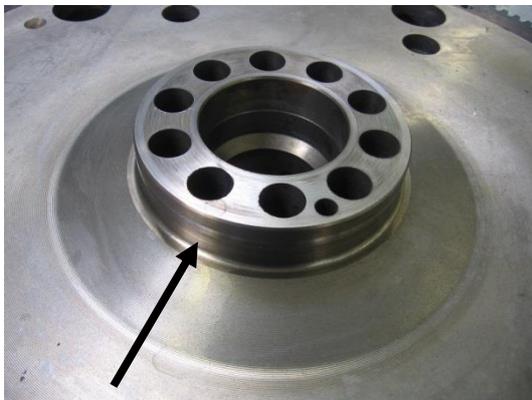

Flywheel without race

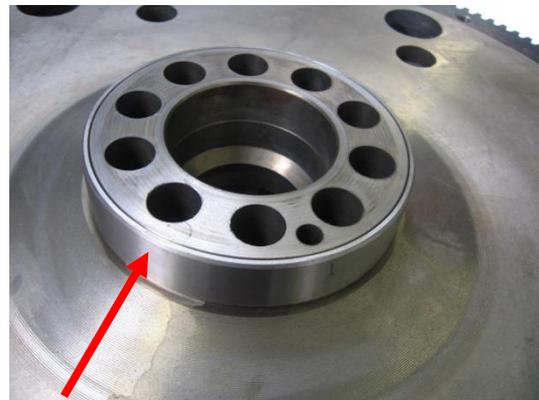

Flywheel with race

### Standard features:

Please note the following before installing the flywheel!

An oil seal with an inner diameter of 115 mm forms a seal directly on the flywheel. A race *must not* be used here.

### To be taken into consideration for engine repairs:

**Please note the following before installing the flywheel!**

An oil seal with an inner diameter of 120 mm must only be used in combination with a race.

Otherwise, an increased oil loss is the consequence.



354.090

51.01510-0283

115x140x12 ASW LD PTFE/ACM



834.289

51.02130-0013

115x120x21 FE PR

766.829

51.01510-0206

120x140x13 AW/BS LD PTFE/ACM